

8000 PROPANE RIDE-ON SCRAPER

SUPPLEMENTAL

MANUAL

FOR MACHINE VARIANT 8000-31XXXX ONLY



Read Manual Before Operating Machine

Table of Contents

Table of Contents	3
Seat Belt	5
Operation	5
Parts List - Seat Belt 403941	5

Note: This supplemental manual only includes features specific to machine variant 8000-31XXXX. For general operating and service information, reference this machine’s Operating and Service Manuals.

Seat Belt

SEAT BELT OPERATION


- 1. To use seat belt, sit upright and pull buckle across lap and fasten into receiver.
- 2. Ensure belt is snug and lies low across your hips.
- 3. To release seat belt, press the red button and allow belt to retract.



WARNING: IMPROPER USE MAY RESULT IN REDUCED EFFECTIVENESS OR INJURY.

PARTS LIST - SEAT BELT 403941

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	403897	Belt, Seat, Lap, 2 Point, Retractable	1
2	403906	Bracket, Mount, Seatbelt	2
3	73222	Bolt, Flange 3/8-16 x 1	4
4	73264	Washer, Flat, Zinc USS 3/8	10
5	73207	Nut, NyLock 3/8-16	4

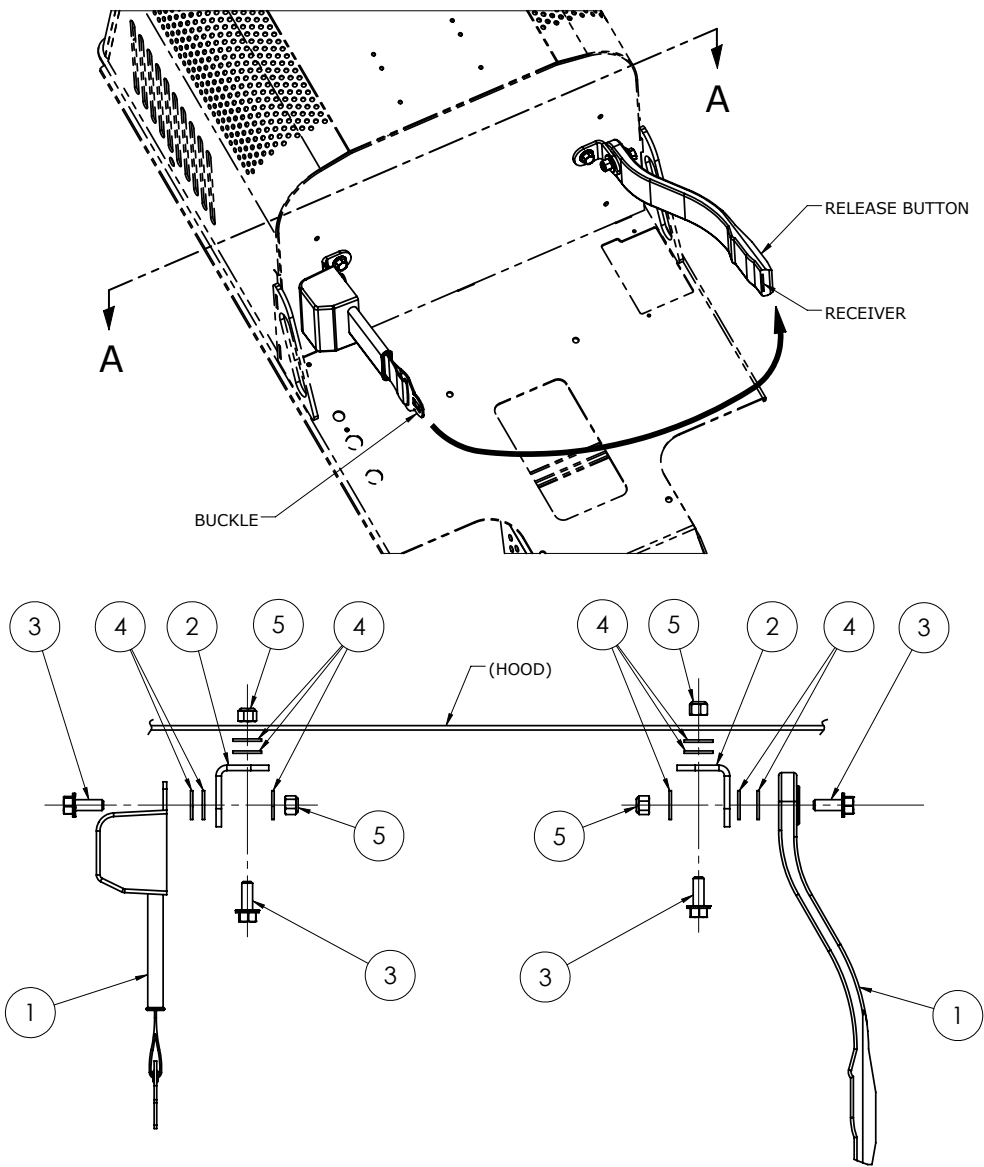



Made in America Since 1968

9250 Xylon Avenue N • Minneapolis, MN 55445 • U.S.A.
Toll-free 800-245-0267 • Phone 763-315-5300 • Fax 800-648-7124 • Fax 763-535-8255
Web Site: www.nationalequipment.com • E-Mail: info@nationalequipment.com